

LED Stop/Slow Paddle Instructions

Thank you for purchasing your new LED Paddle

Included:

LED Paddle
2200 mAh Lithium ion rechargeable battery
Micro USB wall charger
Wrist strap



Operation of the LED Paddle

1. Battery should be fully charged before use.
2. Grasp the foam handle and hold the paddle upward.
3. Press the **FLASH/ON/OFF** button above the handle to switch between flashing, solid, and off modes. (Each side of paddle has its own control button).
4. When ready for storage, make sure the sign is powered off.

Charging Instructions

1. To charge the battery, plug the Micro USB charger into a 120/240V AC wall outlet.
2. Insert the Micro-USB end into the battery charge port, located at the bottom of the sign handle.
3. The LED indicator on the battery will flash red. This will indicate that the battery is being charged. A discharged battery will take approximately 3-4 hours to completely charge.
4. When the battery is fully charged the LED Indicator will glow solid red. You may disconnect the charger and use the sign.



Battery Replacement

1. Twist the battery to the left (counterclockwise) and pull to remove.
2. Insert new battery and twist right (clockwise) to lock into place.
3. Your sign battery also functions as a power bank. Connect a USB cord to the battery Power bank USB Port to charge other devices.

*Only use included battery or manufacturers replacement.