


LED A-Frame Sign

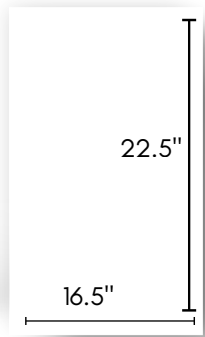

A-Frame Sign



Backlit Film Paper



USB-C Charging Adapter & Cord



Magnetic Rechargeable Battery

Setup Instructions

- 1. Charge**
Make sure to charge your unit before use. Once dead, the battery will take 5 hours to charge to completion.
- 2. Connect the Battery**
Join the battery cable with the LED panel cable and magnetically snap the battery to the lower backend of the sign.
- 3. Insert the Whiteboard Paper into the Corners**
We recommend facing the glossy side outward.
- 4. Write Your Message**
Use any dry-erase marker (not included) to write on the board.
- 5. Power On**
Press & hold the red button on the battery to power On/Off, and single press to switch between the lighting modes (*25% light, 50% light, 100% light, flashing*).
- 6. Erase & Re-Use**
We recommend using a fabric cloth to remove the marker — paper products do not have enough grip. Get the last residue off with a dry-erase spray if handy.

*Please Note: The provided paper is a translucent polyester backlit film that can be printed on. While we do not currently provide this printing service, you are encouraged to create and print your own custom designs.