TCIL Series Troubleshooting Guide

 
LEDs out

There are some

TCIL Series 120-277VAC

Identify the Sign Problem: Follow the flowchart to diagnose the symptoms

Tools Needed: Philips head screwdriver Multi-meter



Always turn off the power to the sign prior to opening the cabinet. Disconnect the power wires going to the sign.

Pg

3

The display is

flickering

Note: Make appropriate wiring connections per local codes.

The entire display

is out

Description of Normal Operation for the Signal's Internal Power Supply

Diagnostic LEDs are included on the internal power supply to aid in verifying that input power is present and is being transferred to the sign face through the output connectors.

Рg

A message is lit

that shouldn't be

+12V LED

This LED illuminates Green when 120-277VAC power is applied to the internal power supply's input power pigtail. *Note:* The transformer on the power supply converts 120-277VAC power to +12V.

A Output LED

Illuminates with power applied to Black/White stripe wire on the input power pigtail

C Output LED


Illuminates with power applied to Black/Red stripe wire on the input power pigtail


B Output LED (Used for third message ONLY)

Illuminates with power applied to Black/Yellow stripe wire on the input power pigtail

Output Connectors

These connectors transfer power from the internal power supply to the sign face to illuminate the individual message(s).

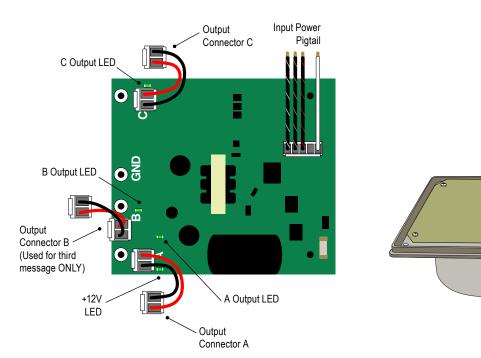

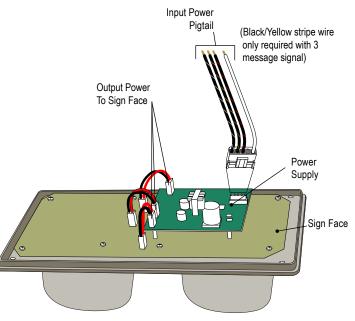


Last Update: 07/16/20

Ρg

5


Problem: There are some LEDs out

TCIL Series 120-277VAC

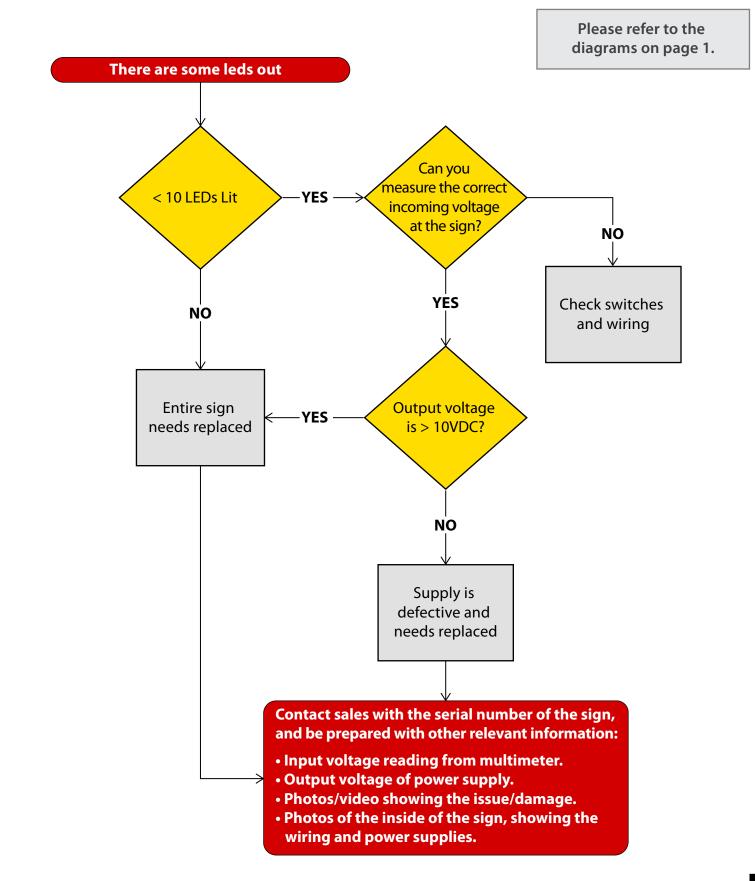


Problem: A message is lit that shouldn't be

TCIL Series 120-277VAC

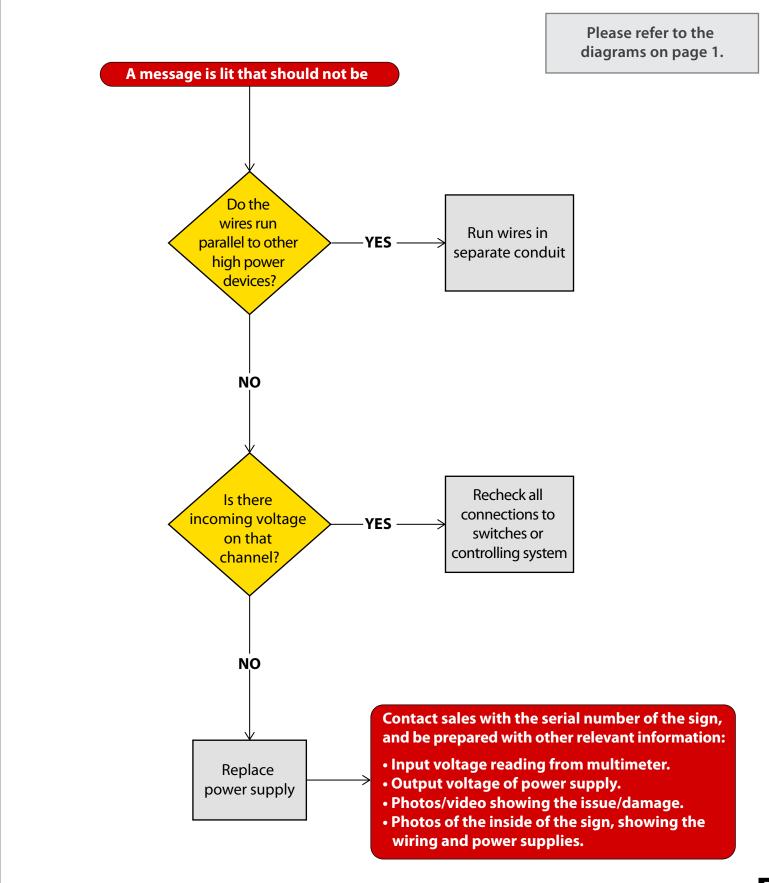

Problem: Display is flickering

TCIL Series 120-277VAC

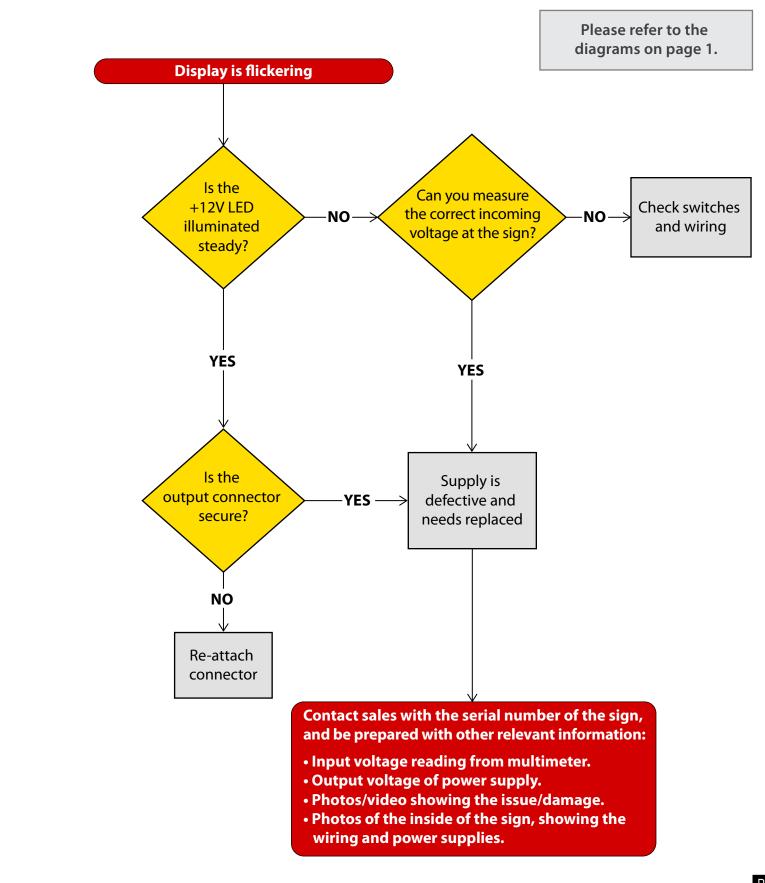

Problem: Entire display is out

TCIL Series 120-277VAC

