


MARKER BOARD INSTRUCTIONS

Screws are not needed for frames with “Quick-Change”™
Simpo Sign II, Econo Classic, Sidewalk Sign, Wind Signs, and Signicade Deluxe
(*Simpo II and Sidewalk Sign do not have tabs, follow steps 3 and 4 only*)

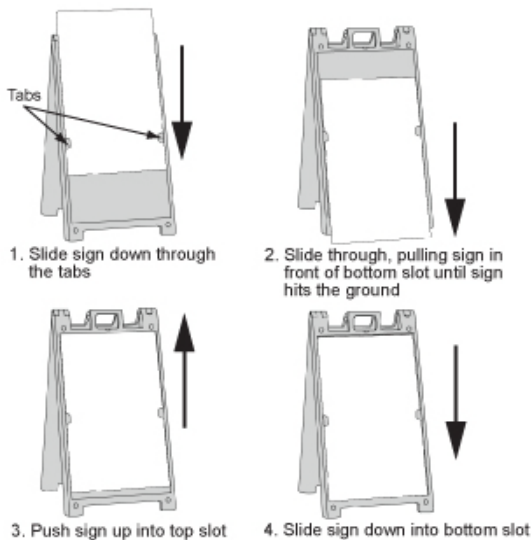

NEON WET ERASE MARKERS

Shake the markers well before using. The markers will not rub off or wash off in the rain after drying. To change the sign, or any part of it, wipe with any glass cleaner that contains ammonia. Mr. Clean Magic Eraser Sponge (sold at most superstores and grocery stores) works great at taking off any remaining marker residue. Attempting to clean before the marker dries will smear the surface and make cleaning difficult.

SIGNICADE ,MARQUEE AND FRAMES– Attaching Panels to Frames

Place panel on frame face so it sits flat in the recessed area of the sign.

Using 6 flat head screws per side, attach the panels to the frames. They should be evenly spaced on each side of the panel with one at the top, one at the bottom and one near the middle of the sign.

** Make sure the screws are put in so the ends will be in the wider recessed area of the frame when they are screwed in so the sharp points of the screws won't cause any injuries when handling the sign.