LED Cone Ring Light 6-Pack Instructions



What's Included:

x1 Charging Dock Carrying Case	x1 AC/DC Charger
x6 LED Cone Ring Lights	x1 Car Charger

Operating Instructions:

1. We recommend laying the case down on a hard surface before taking the rings out. Tightly grip one of the rings & lift up with force (A). Wait 3 seconds before taking the next one out so the system can reset.

2. The ring lights should automatically turn on when they are removed from the case. The order they are activated/taken out determines their sequence.

3. If you would like to **change the sequence order**, press & hold the power (B) button on any ring light to turn them all off. Then turn them back on individually in your desired order by pressing the power button one time on each.

4. To cycle through each of the **5 lighting functions**, press the function button (C)
on any activated light. All rings will sync together automatically.

5. To switch to **independent mode**, press & hold the function button on an activated ring. It will now have 6 lighting modes (Rotating Flash, Quad Flash, Single Blink, Alternating Flash, SOS Flash, and Steady On). When docked back in the case, it will revert to auto synchronization.

6. To power off individual ring lights, dock them back into the carrying case & they will turn off automatically **(see docking instructions)**. To shut off all rings at the same time, press & hold the power button on any activated light.



A

B

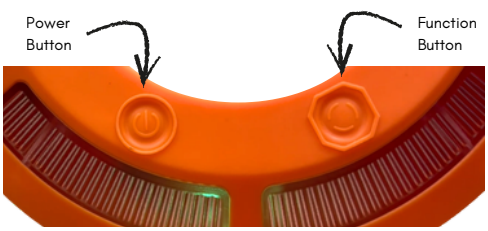

C

Charging/Docking Instructions:

The carry case must be plugged into a power outlet for the rings to charge. Plug the charger into the top of the carry case. The rings will either glow red (charging), or green (fully charged). If they do not glow light, they have not been docked correctly. The rings can **not** be used while being charged. Unplug the carry case **before** taking the rings lights out for use.

The ring lights **must be docked properly** (D) into the carrying case for them to charge & work. Each ring light has 2 metal contact points on the bottom- these must align with the contact points inside each slot in the carry case. An easy way to know is if the reflective strips are located on the left & right sides, & the power/function buttons are pointed down.

Place any ring light into any open slot in any order. If you are using multiple 6-packs, the rings can interchange between carry cases, but can **not** all be synched together.

Troubleshooting Tips:
*If a ring light does not automatically turn on when removed from the case, press the power button once to power it on. You may need to re-dock the light and then remove it again. If a ring light does not automatically shut off when placed in the case, it is **not** docked properly.*

Correct Docking is Necessary

D



Ref 10.2026

TRAFFIC SAFETY WAREHOUSE
The Best in Safety for Less
(847) 966-1018 | TrafficSafetyWarehouse.com