
## Low Profile 6' Speed Bump 2" High

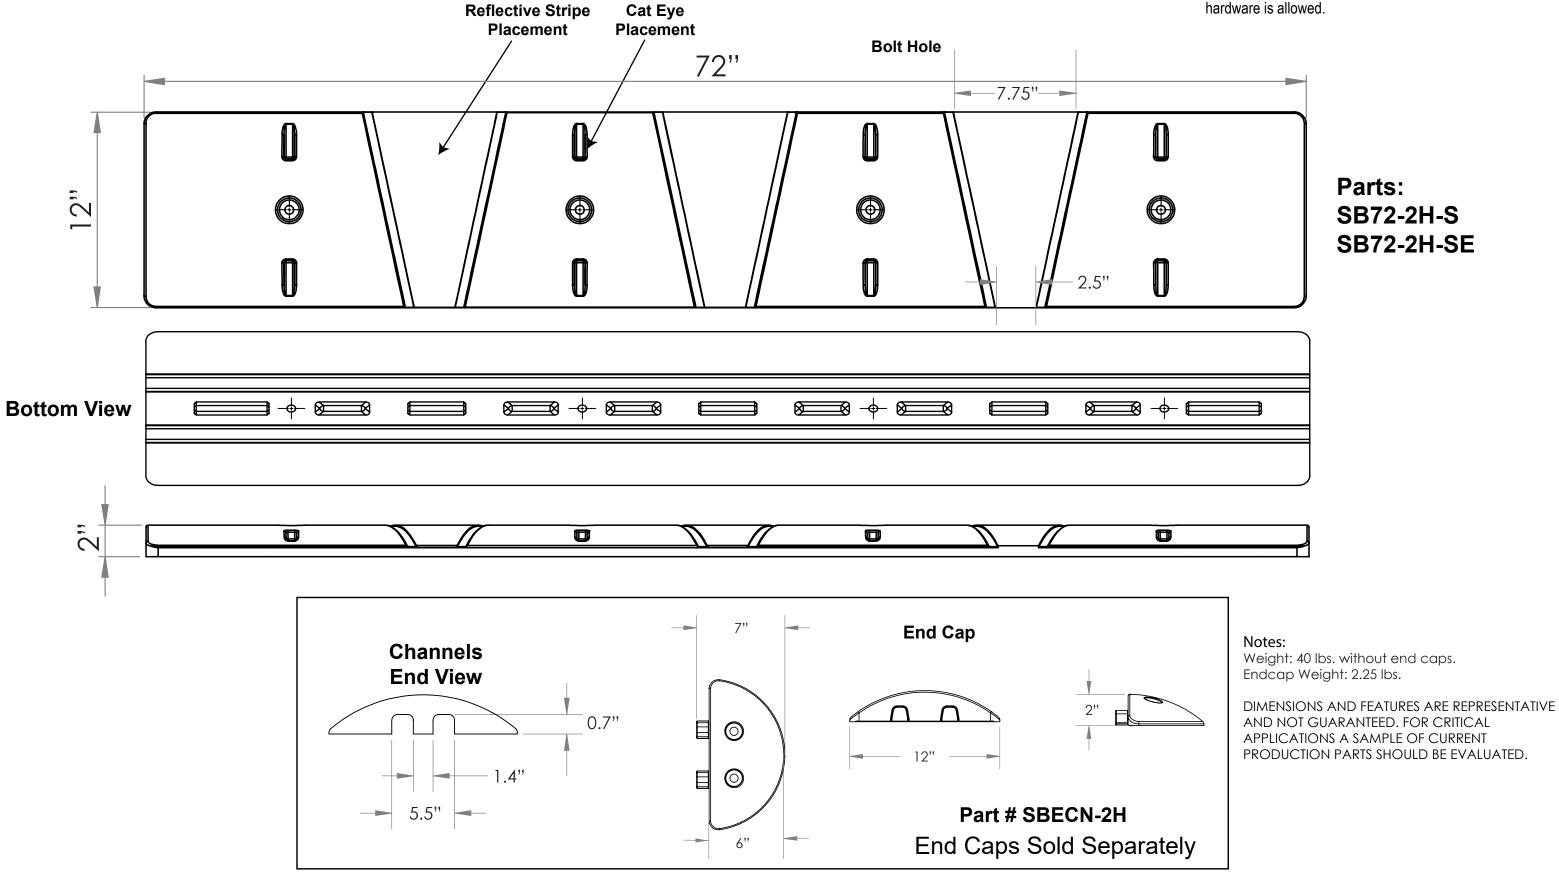

Hardware installation holes are drilled with a  $\frac{1}{2}$ " drill bit. Hardware available:

Asphalt or gravel: 14" x 1/2" rebar spike with 5/8" washer Concrete:  $4\frac{1}{2}$ " lag bolt with 2" lag shield and  $\frac{1}{2}$ " washer

Use 10 ounce of epoxy or construction adhesive (ie. Polyurethane PL Premium) for installations where no hardware is allowed.