


Watchdog™ Folding Flag

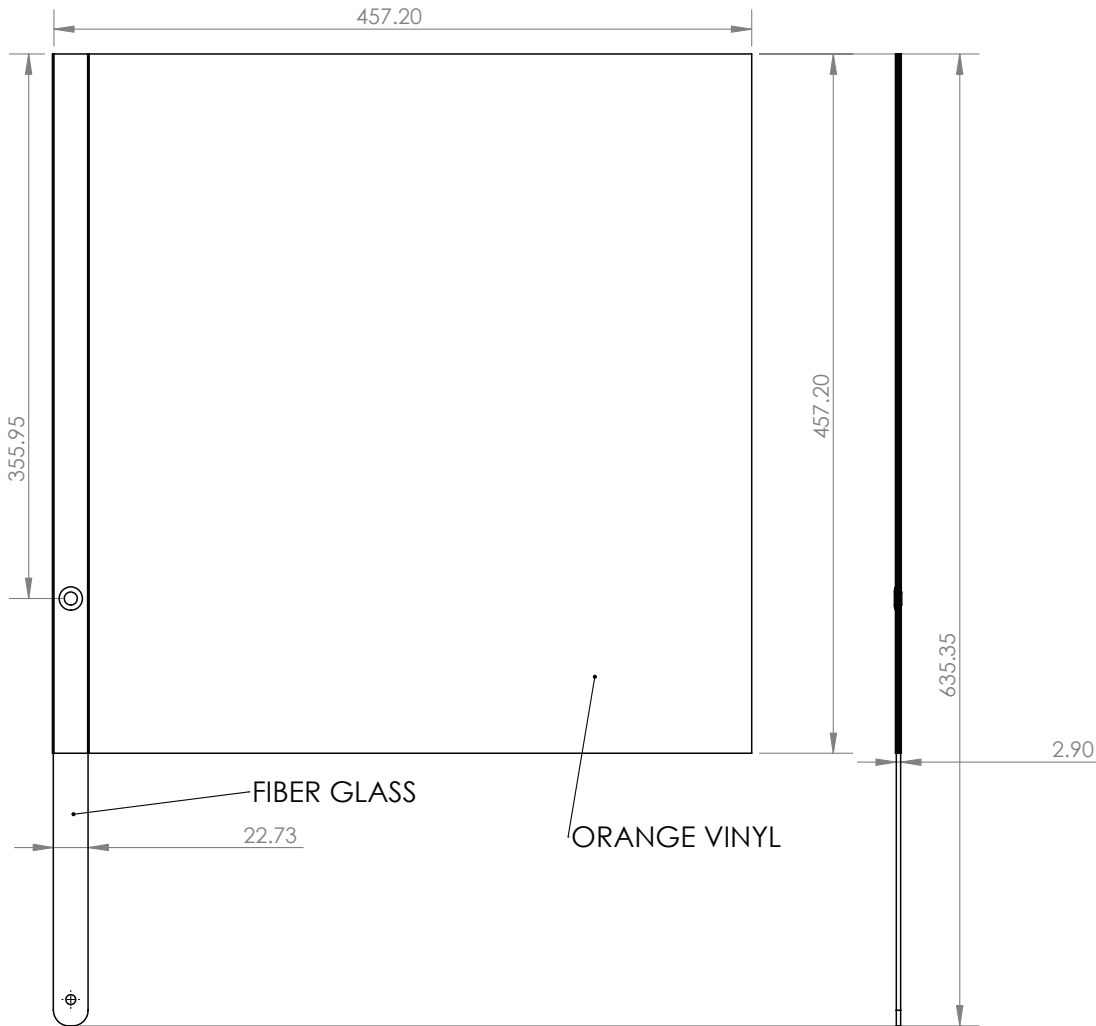

Installation Instructions

1. Drill 1/4" hole in the vertical cross brace. (See illustration below for hole placement)
2. Attach flag assembly using the following hardware, not included.
 - A. One bolt, 1" long, 7/16" head
 - B. One nut, 7/16" hex head
 - C. Two washers, 1"

Hole Placement on Roll-Up Cross Brace

